

## How To Change Spooky Remotes from MN To BN

Spooky Remotes can be converted from MN to BN, or visa versa, by following the instructions below.

Tools required:

1 x Spooky Remote (Here we use the MN)

1 x marker pen

Dental floss

1. Get some thin dental floss. Cut off about a meter of it.




2. Tie one end of the dental floss to a door handle or anything firm.




3. Remove the top protective foam of your Spooky Remote.



Place a mark on the top face of the magnet.

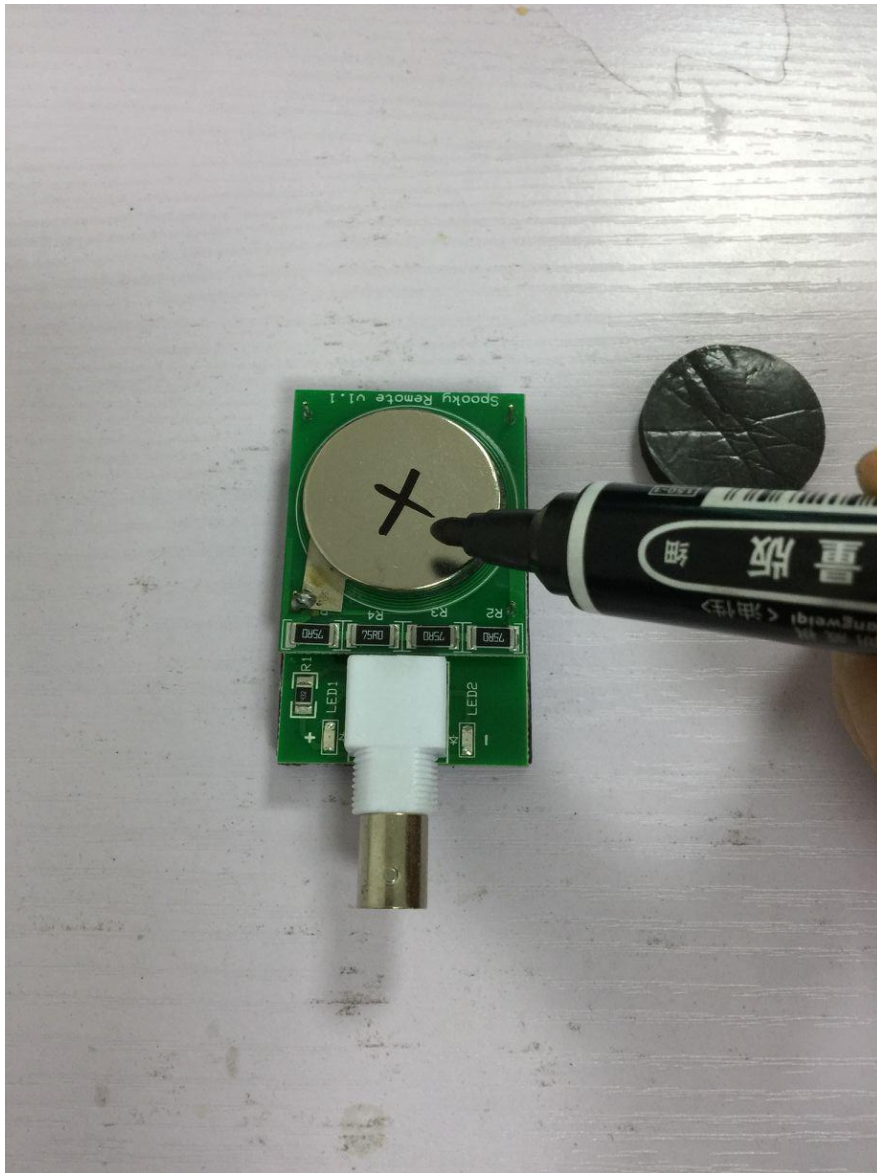


4. Position the dental floss so that it goes OVER the shim and slide it up to the underside of the magnet. Hold Spooky Remote firmly and pull the floss steadily towards you until the adhesive releases the magnet. Do not use excessive force.

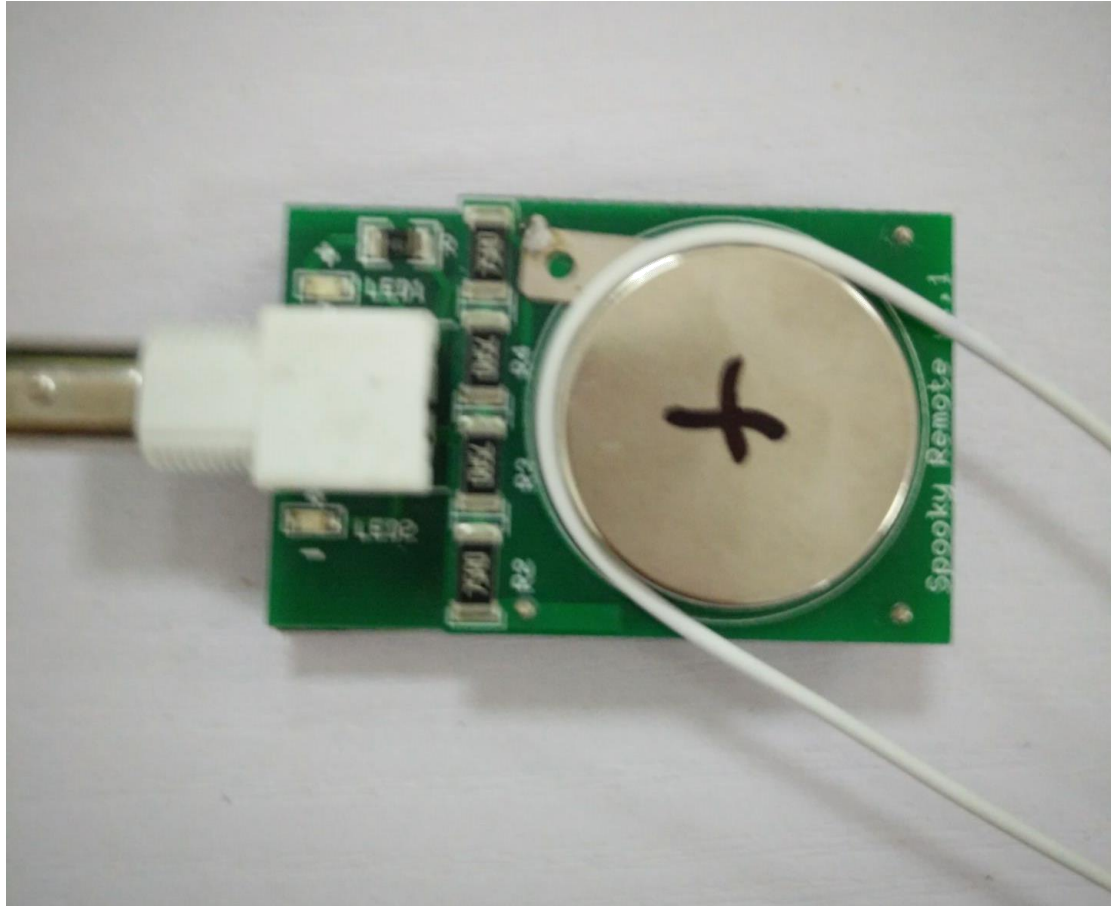




Spooky Remote will now look like this, with the magnet separated from the bottom adhesive foam.

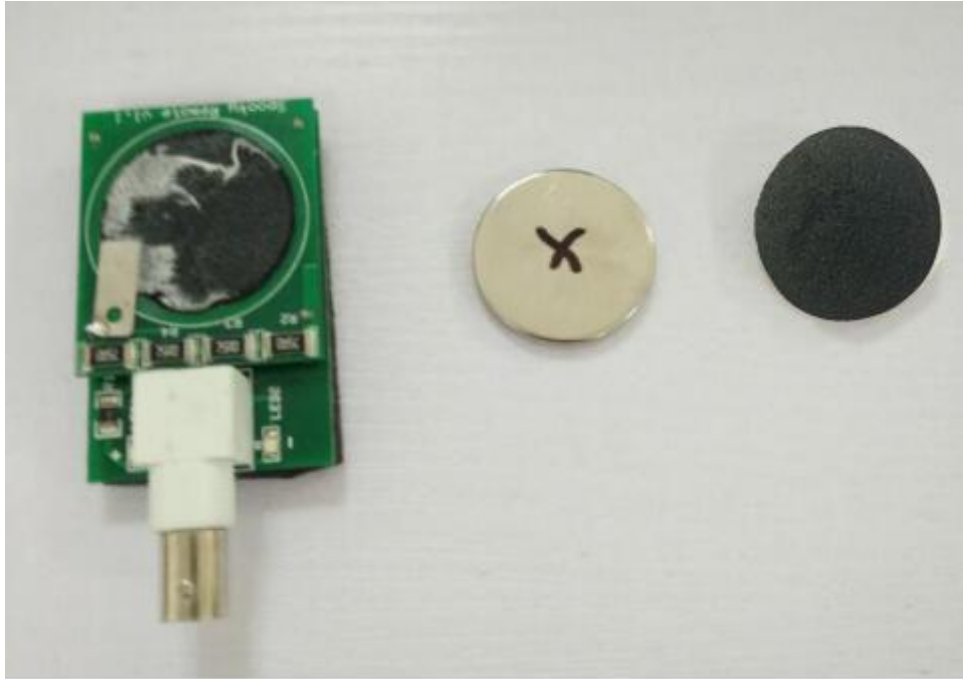

Invert the magnet and place on the bottom adhesive. Your mark should be on the underside of the magnet.

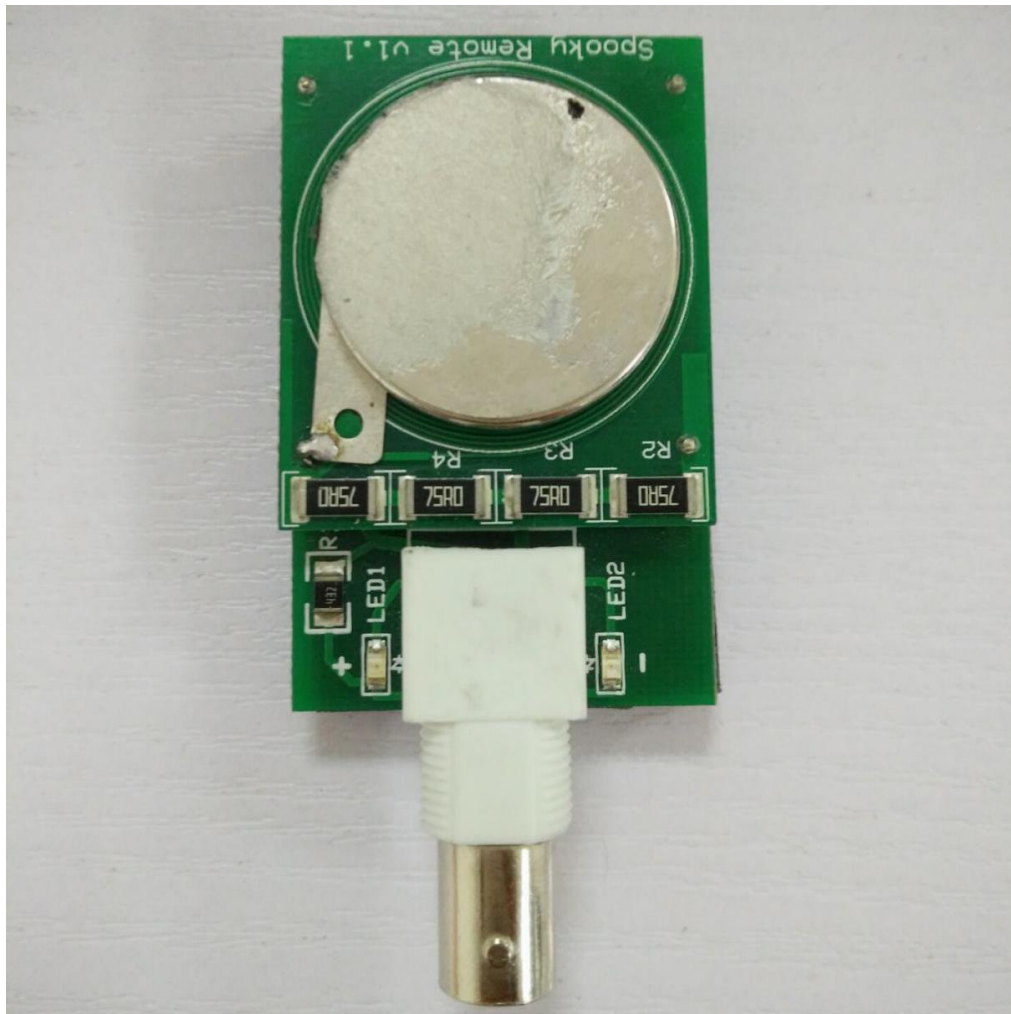

Reinstate the top protective foam. Use the marker to write the new function of your Spooky Remote. If the remote was previously a MN (as in our example) you would write "BN" on the foam. This makes future identification easy and avoids confusion at a later date.

